

# ETHAN ALLEN®

## Kent Sphere Pendant Assembly Instructions

093075 10BRS / 093075 10NKL / 093075 10ORB / 093075 14BRS / 093075 14NKL / 093075 14ORB

### IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING:

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulbs. This fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support weight of the light fixture. This fixture weighs 4.84 lbs. (2.20 kg).



**WARNING:** Be certain the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.


**CAUTION:** Prior to installation, locate ALL INCLUDED PARTS before disposing of packing materials.

TOOLS REQUIRED FOR INSTALLATION	
Screwdrivers	Pliers
Electrical Tape	Wire Connectors
Wire Cutters	Adjustable Wrench

**Note:** Light bulb(s) are not included.  
Requires one 40W-maximum Type A bulb.

PARTS NOT INCLUDED		
Part	QTY	Description
A	1	Ceiling Outlet Junction Box
B	1	Ground Junction Box Wire
C	1	Hot Junction Box Wire
D	1	Neutral Junction Box Wire

PARTS INCLUDED (REFER TO FIGURE):		
Part	QTY	Description
E	1	Mounting Bracket
F	2	Mounting Screws
G	2	Flat Screws
H	1	Ground Screw
I	1	Hot Fixture Wire
J	1	Neutral Fixture Wire
K	1	Ground Wire
L	2	Wire Connector
M	1	Canopy
N	2	6" Rod
O	2	12" Rod
P	1	Socket Assembly
Q	1	Glass Shade (packed separately)
R	1	Rubber Washer
S	1	Metal Washer
T	1	Socket Ring
U	1	Bulb (not included)

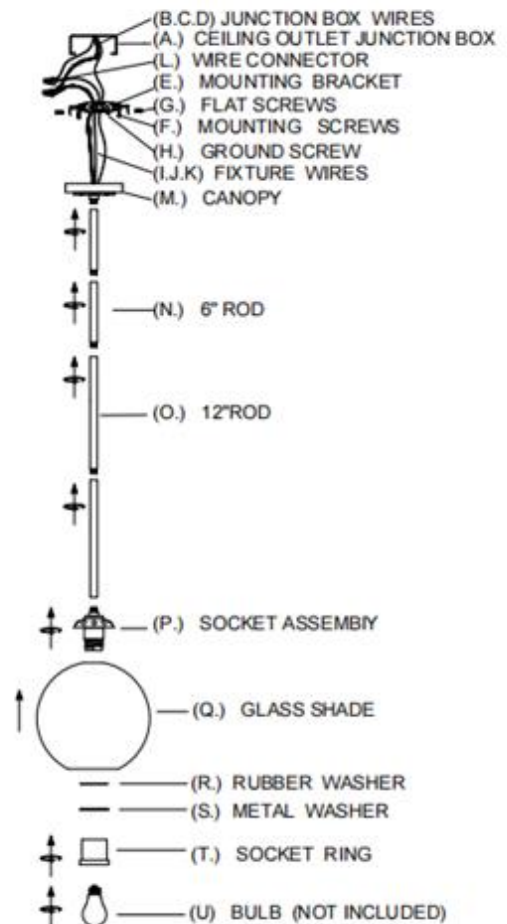

# ETHAN ALLEN®

## Kent Sphere Pendant Assembly Instructions

093075 10BRS / 093075 10NKL / 093075 10ORB / 093075 14BRS / 093075 14NKL / 093075 14ORB

### INSTALLATION PROCEDURE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all the parts from the carton. Do not throw away any parts.
3. Gently pull existing Ground (B), Hot (C), and Neutral (D) Junction Box Wires down from the Ceiling Junction Box (A) and allow these to hang.
4. Fix Mounting Bracket (E) to Junction Box (A) with Mounting Screws (F).
5. Make proper electrical connections as described in steps 6–10. A LICENSED ELECTRICIAN IS RECOMMENDED.
6. Carefully inspect the fixture wires. The Neutral Fixture Wire (J) is white, the Hot Fixture Wire (I) is black, and the Ground Wire (K) is bare copper.
7. Attach the Ground Wire (K) from the fixture to the Ground Junction Box Wire (B); Fasten them together with a Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (H) into the Mounting Bracket (E) where it is marked "Ground" and wrap the fixtures bare ground wire around the Ground Screw (H). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (H) head and Mounting Bracket (E). It is imperative that the Junction Box (A) in your home be properly grounded.
8. Connect the Neutral Fixture Wire (J) to the Neutral Junction Box Wire (D). Fasten them together with a plastic Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
9. Connect the Hot Fixture Wire (I) to Hot Junction Box Wire (C). Fasten them together with a plastic Wire connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
10. Gently tuck the wire connections neatly into the Junction Box (A).
11. Fix Canopy (M) to Mounting Bracket (E) with Flat Screws (G).
12. Determine the distance you want between your ceiling and the top of the Glass Shade (Q). This distance will determine how many, and in what combination, you use the 6" (N) and 12" Hanging Rods (O). For example, if you want your pendant to hang 24" below your ceiling, use the two 12" Hanging Rods (O).
13. Screw together your preferred combination of Hanging Rods (O). Once they're connected, screw the top end into the Canopy (M) and the bottom end into the Socket Assembly (P).
14. Place the Glass Shade (Q) over the Socket Assembly (P). Place the Rubber Washer (R) and Metal Washer (S) against the bottom of the Glass Shade and screw in with the Socket Ring (R) to hold the shade in place.
15. Insert one 40W-maximum Type A light bulb (not included) into the socket. Do not exceed the specified wattage.

### Care Instructions:

1. Wipe with a soft, dry cloth.
2. AVOID cleaners, harsh chemicals, scouring pads, etc. as these may cause damage to the fixture finish.

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS

