

ETHAN ALLEN®

Zara Pendant

ASSEMBLY INSTRUCTIONS

094001 BRS

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulbs. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs: 5.7 lbs. (2.6 kg).



WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.


CAUTION: Prior to installation, locate All INCLUDED PARTS before disposing of packaging materials.

TOOLS REQUIRED FOR INSTALLATION	
Screwdrivers	Pliers
Electrical Tape	Wire Connectors
Wire Cutters	Adjustable Wrench

Note: Lightbulb(s) (3.3W max LED E12) are not included. Additional wiring supplies may be required.

Parts Not Included:		
Part	Qty.	Description
A	1	Ceiling Outlet Junction Box
B	1	Ground Junction Box Wire
C	1	Hot Junction Box Wire
D	1	Neutral Junction Box Wire

Parts Included (Refer to figure):		
Part	Qty.	Description
E	1	Hot Fixture Wire
F	1	Mounting Bracket
G	2	Mounting Screws
H	1	Canopy
I	3	Wire Connectors
J	1	Ground Fixture Wire
K	1	Neutral Fixture Wire
L	1	Ground Screw
M	1	Collar
N	1	Hook
O	2	Extension Pipe
P	1	Shade
Q	1	Short Pipe
R	4	Socket
S	1	Center Rod
T	1	Crystal Ball
U	1	Upper Shade Washer
V	1	Lower Shade Washer
W	1	Shade Split Washer
X	1	Loop

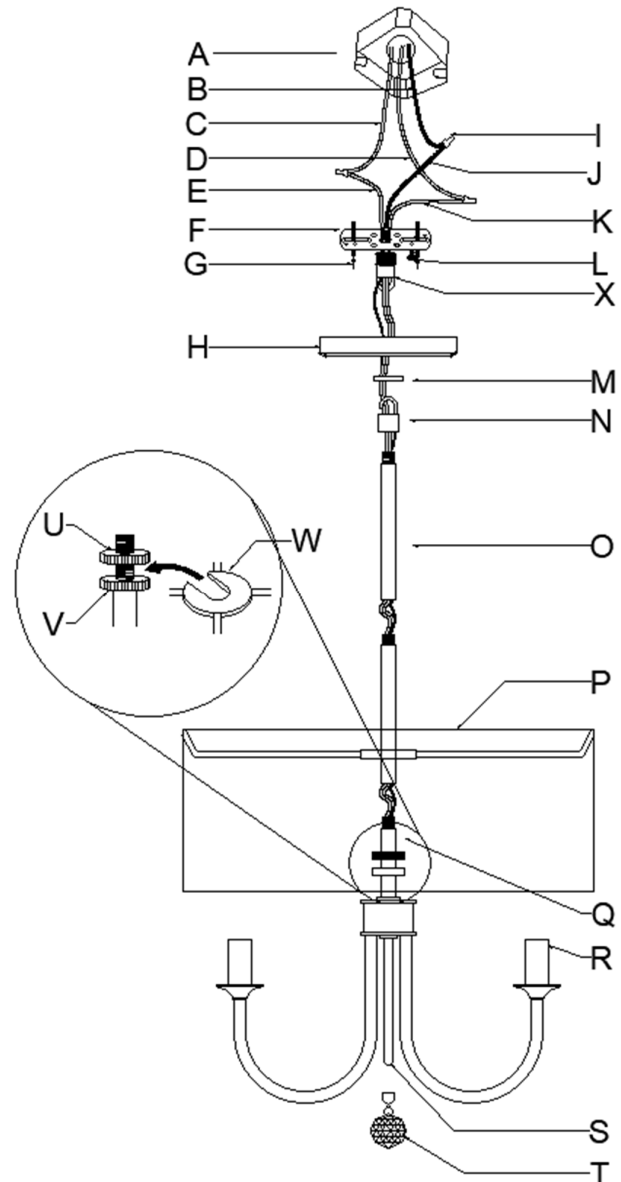

094001 BRS Zara Pendant Assembly Instructions, continued

Assembly Procedure (refer to the figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all the parts from the carton. Do not throw away any parts.
3. Lift Shade (P) body of fixture over the tubes. Slide Shade Split Washer (W) between Upper Shade Washer (U) and Lower Shade Washer (V). Secure position of Shade (P) by turning the Upper Shade Washer (U) clockwise until it rests firmly against the Split Washer (V).
4. Remove Mounting Bracket (F), with Loop (X) attached, from Canopy (H) by loosening Collar (M).
5. Affix Mounting Bracket (B) to ceiling outlet box with Mounting Screws (G) provided.
6. Guide wiring from Extension Pipe (O), Hook (N) and Collar (M) through Canopy (H) and Loop (X). Measure the desired drop for the fixture to hand and add or remove additional Extension Pipe (O) as needed.
7. Carefully inspect the pendant's fixture wires. The Neutral Fixture Wire (K) is ribbed, the Hot Fixture Wire (E) is smooth, and the Ground Fixture Wire (J) is copper.
8. Make proper electrical connections as described in steps 9–12. A LICENSED ELECTRICIAN IS RECOMMENDED.
9. Attach the Ground Fixture Wire (J) from the fixture to the Ground Junction Box Wire (B); it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (I) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Ceiling Outlet Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (L) into the Mounting Bracket (F) where it's marked "Ground," and wrap the bare Ground Fixture Wire (J) around the Ground Screw (L). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (L) head and the Mounting Bracket (F). It is imperative that the Ceiling Junction Box (A) in your home be properly grounded.
10. Connect the Neutral Fixture Wire (K) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (I) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
11. Connect the Hot Fixture Wire (E) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten these together with a plastic Wire Connector (I) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently tuck the wire connections neatly into the Ceiling Outlet Junction Box (A).
13. Lift Canopy (H) to Ceiling Outlet Junction Box (A) and secure with Collar (M).
14. Hang the Crystal Ball (T) on the bottom of the Center Rod (S).
15. Insert proper bulbs (3.3W max LED E12) into Sockets (R).

Care Instructions

1. Wipe with a soft, dry cloth.
2. AVOID cleaners, harsh chemicals, scouring pads, etc. as these may cause damage to the chandelier finish.

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS